
WEEE Warning Message

Symbol for Separate Collection in European Countries

This symbol indicates that this product is to be collected separately.

The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1). This device may not cause harmful interference, and
- (2). This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of the FCC rules. Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Product Information

1. Product design and specifications are subject to change without notice. This includes primary product specifications, software, software drivers, and user's manual. This User Manual is a general reference guide for the product.
2. The product and accessories that come with your camera may be different from those described in this manual. This is due to the fact that different retailers often specify slightly different product inclusions and accessories to suit their market requirements, customer demographics, and geographical preferences. Products very often vary between retailers especially with accessories such as batteries, chargers, AC adapters, memory cards, cables, carrying cases/pouches, and language support. Occasionally a retailer will specify a unique product color, appearance, and internal memory capacity. Contact your dealer for precise product definition and included accessories.
3. The illustrations in this manual are for the purpose of explanation and may differ from the actual design of your camera.
4. The manufacturer assumes no liability for any errors or discrepancies in this user manual.
5. For driver updates, you can check the "Download" section of our website, www.geniusnet.com

SAFETY INSTRUCTIONS

Read and understand all **Warnings** and **Cautions** before using this product.

Warnings

- **If foreign objects or water have entered the camera, turn the power OFF and remove the battery.**

Continued use in this state might cause fire or electric shock. Consult the store of purchase.



- **If the camera has fallen or its case has been damaged, turn the power OFF and remove the battery.**

Continued use in this state might cause fire or electric shock. Consult the store of purchase.



- **Do not disassemble, change or repair the camera.**

This might cause fire or electric shock. For repair or internal inspection, ask retailer where you purchased it.



- **Do not use the camera in areas near water.**

This might cause fire or electric shock. Take special care during rain,



snow, on the beach, or near the shore.

- **Do not place the camera on inclined or unstable surfaces.**

This might cause the camera to fall or tilt over, causing injury.

- **Keep the batteries out of the reach of children.**

Swallowing batteries might cause poisoning. If the battery is accidentally swallowed, immediately consult a physician.

- **Do not use the camera while you are walking, driving or riding a motorcycle.**

This might cause you to fall over or result in a traffic accident.



Cautions

- **Insert the batteries paying careful attention to the polarity (+ or –) of the terminals.**

Inserting the batteries with its polarities inverted might cause fire and injury, or damage to the surrounding areas due to the battery rupturing or leaking.

- **Do not fire the flash close to anyone's eyes.**

This might cause damage to the person's eyesight.

- **Do not subject the LCD monitor to impact.**

This might damage the glass on the screen or cause the internal fluid to leak. If the internal fluid enters your eyes or comes into contact with your body or clothes, rinse with fresh water.

If the internal fluid has entered your eyes, consult a physician to receive treatment.

- **A camera is a precision instrument. Do not drop it, strike it or use excessive force when handling the camera.**

This might cause damage to the camera.

- **Do not use the camera in humid, steamy, smoky, or dusty places.**

This might cause fire or electric shock.

- **Do not remove the battery immediately after long period of continuous use.**

The battery becomes hot during use. Touching a hot battery might cause burns.

- **Do not wrap the camera or place it in cloth or blankets.**

This might cause heat to build up and deform the case, resulting in fire. Use the camera in a well-ventilated place.

- **Do not leave the camera in places where the temperature may rise significantly, such as inside a car.**

This might adversely affect the case or the parts inside, resulting in fire.

- **Before you move the camera, disconnect cords and cables.**

Failure to do this might damage cords and cables, resulting in fire and electric shock.



Notes on Battery Usage

When you use the battery, carefully read and strictly observe the ***Safety Instructions*** and the notes described below:

- Use only the specified battery (NP60, 3.7V).
- Avoid using the battery in extremely cold environments as low temperatures can shorten the battery life and reduce camera performance.
- When you are using the new rechargeable battery or rechargeable battery that has not been used for an extended period of time (the battery that passed the expiry date is an exception) might affect the number of images that can be captured. Therefore, to maximize its performance and lifetime, we recommend that you fully charge the battery and discharge it for at least one complete cycle before use.
- The battery may feel warm after long period of continuous use of the camera or the flash. This is normal and not a malfunction.
- The camera may feel warm after long period of continuous use. This is normal and not a malfunction.
- If the battery is not to be used for a long period of time, remove it from the camera to prevent leakage or corrosion.
- If the battery is not to be used for a long period of time, store it after no battery power left. If the battery is stored for a long time in a fully charged state, its performance may be impaired.
- Always keep the battery terminals in a clean state.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- We recommend the battery should be charged 8 hours for first time use.

CONTENTS

INTRODUCTION	8
OVERVIEW	8
PACKAGE CONTENTS	8
GETTING TO KNOW YOUR DIGITAL VIDEO CAMERA	9
FRONT VIEW	9
REAR VIEW	10
LCD MONITOR INFORMATION	11
Video Mode	11
Capture Mode	12
Video Playback	13
Still Image Playback	13
Audio/MP3 Playback	13
GETTING STARTED	14
INSERTING THE BATTERY	14
TURNING THE POWER ON/OFF	14
LCD INDICATOR	14
ATTACH THE STRAP	15
INSERTING THE SD MEMORY CARD	15
USING THE LCD PANEL	16
SETTING THE DATE AND TIME	16
CHOOSING THE DISPLAY LANGUAGE	17
FORMATTING INTERNAL MEMORY OR AN SD MEMORY CARD	17
SETTING IMAGE RESOLUTION AND QUALITY	18
POSSIBLE NUMBER OF SHOTS (STILL IMAGE)	19
POSSIBLE RECORDING TIME / SEC (VIDEO CLIP)	19
PHOTOGRAPHY MODE	20
CAPTURING STILL IMAGES	20
RECORDING VIDEO CLIPS	20
NORMAL MODE	20
MARCO MODE	21
USING THE DIGITAL ZOOM	21
SETTING THE FLASH	22
SETTING THE SELF-TIMER	23
TV RECORDING MODE	23
PLAYBACK MODE	24
PLAYING BACK STILL IMAGES / VIDEO CLIPS	24
PLAYING BACK STILL IMAGES/VIDEO CLIPS ON TV	24

ZOOM PLAYBACK _____	25
THUMBNAIL DISPLAY _____	25
PROTECTING IMAGES _____	26
SLIDE SHOW DISPLAY _____	26
DELETE STILL IMAGE / VIDEO CLIPS _____	27
MP3 MODE _____	28
AUDIO RECORDING MODE _____	29
RECORDING AUDIO FILES _____	29
PLAYING BACK AUDIO FILES _____	29
DELETING MP3 / AUDIO FILES _____	30
MENU OPTIONS _____	31
VIDEO MENU _____	31
Size _____	31
Quality _____	31
EV _____	31
AWB _____	31
CAPTURE MENU _____	32
SIZE _____	32
QUALITY _____	32
EV _____	32
AWB _____	32
ISO _____	33
DATE PRINT _____	33
TV MENU _____	33
SIZE _____	33
QUALITY _____	33
PLAYBACK MENU _____	34
Slide Show _____	34
DELETE FILE _____	34
DELETE ALL _____	34
PROTECT _____	34
MP3 / AUDIO MENU _____	34
PLAY MODE _____	35
REPEAT _____	35
DELETE _____	35
SYSTEM MENU _____	35
LANGUAGE _____	35
FORMAT _____	35
LCD BRIGHT _____	36
DATE TYPE _____	36
DATE SETUP _____	36
POWER OFF _____	36

COPY TO CARD _____	36
VIDEO OUT _____	36
RESET _____	36
LIGHT FREQ. _____	36
BEEP _____	36
CONNECTING TO A PICTBRIDGE COMPLIANT PRINTER _____	37
TRANSFERRING RECORDED IMAGES AND VIDEOS TO YOUR COMPUTER _	39
STEP 1: INSTALL THE USB DRIVER (WINDOWS 98 ONLY) _____	39
STEP 2: CONNECTING THE DIGITAL VIDEO CAMERA TO YOUR COMPUTER _____	39
STEP 3: DOWNLOADING STILL IMAGES, VIDEO CLIPS AND AUDIO FILES _____	40
USING THE DIGITAL VIDEO CAMERA AS A WEB CAMERA _____	41
STEP 1: INSTALL THE WEB CAMERA DRIVER _____	41
STEP 2: CONNECT THE DIGITAL VIDEO CAMERA TO YOUR COMPUTER _____	42
STEP 3: RUN YOUR APPLICATION SOFTWARE _____	42
INSTALLING VIDEOSTUDIO _____	43
SPECIFICATIONS _____	44
TROUBLESHOOTING _____	45

INTRODUCTION

Overview

Thank you for purchasing this new digital video camera! This digital video camera is designed as an “entry-level” handy cam. Equipped with a 5.0 mega pixel CMOS sensor, your camera delivers good quality, 3264 x 2448 resolution images.

Other features provided by the digital video camera include the following:

- ☐ True 5.0 mega pixel CMOS sensor
- ☐ Maximum 8.0 mega pixel resolution in still image
- ☐ 2.5” Color LTPS TFT LCD
- ☐ 8X digital zoom
- ☐ 7-in-1 Functions: Digital Video Camera, Digital Still Camera, TV Recording and playback, MP3 Player, Voice Recording, Web Camera and Mass storage device.
- ☐ Powerful MPEG4 video format for larger image capacity and better quality.
- ☐ Supports 12 types of photo frames in camera mode.
- ☐ PictBridge support

Package Contents


Carefully unpack your kit box and ensure that you have the following items. In the event that any item is missing or if you find any mismatch or damage, promptly contact your dealer.

Common Product Components:

1. Digital Video Camera
2. CD driver includes:
 - ☐ Ulead VideoStudio SE 8.0
 - ☐ USB/Web Cam driver for Windows 98SE/2000/ME/XP
 - ☐ Multi-Language User’s Manual
3. USB cable
4. AV cable
5. AC power adapter
6. Battery charger
7. AC Plug Adaptor for EU to US
8. One NP-60 Lithium ion rechargeable Battery
9. Quick Guide
10. Pouch
11. Strap


GETTING TO KNOW YOUR DIGITAL VIDEO CAMERA

Front View

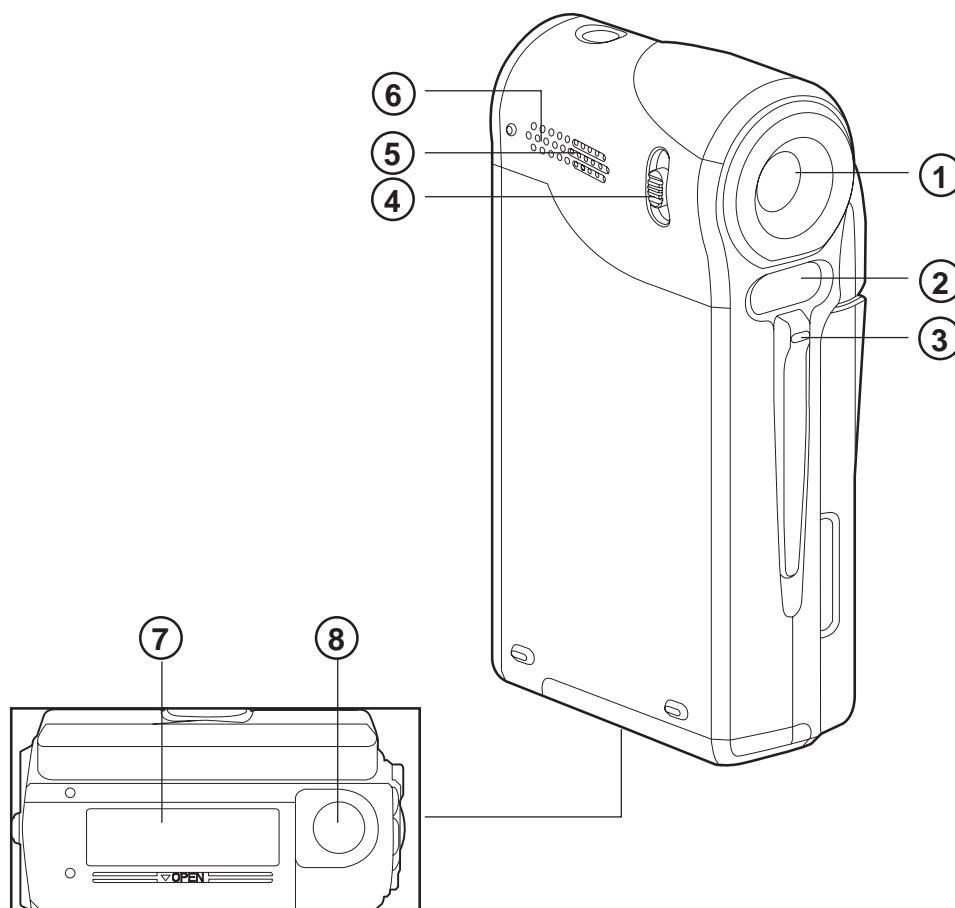

1. Lens
2. Flash
3. Self-timer LED
4. Focus switch
 - ▲ Normal mode
 - 🌸 Macro mode
5. Speaker
6. Microphone
7. Battery/SD memory card cover
8. Tripod socket

Rear View

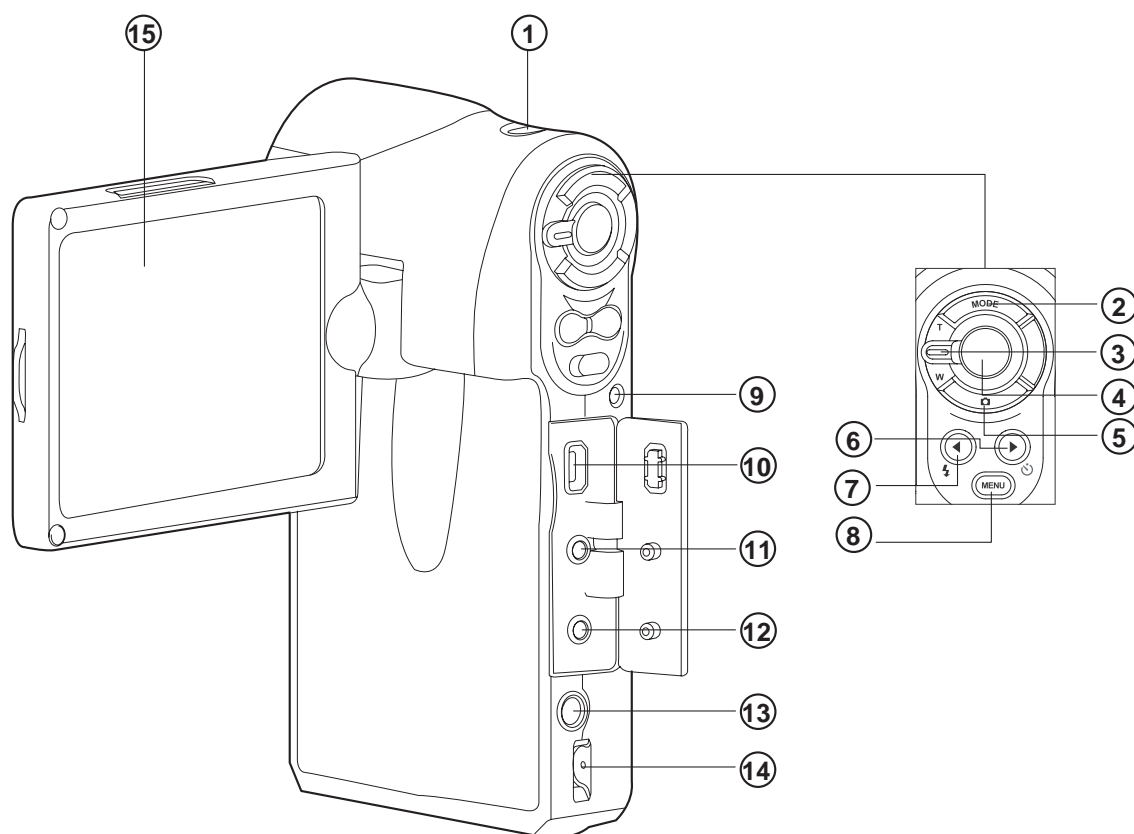

1. ① Power button
2. **MODE** Mode button
3. Zoom lever
T Zoom in
W Zoom out
4. ○ Record button
5. 📷 Image button
6. ▶ Right button
⌚ Self-timer button

7. ◀ Left button
⚡ Flash button
8. **MENU** Menu button
9. Status LED indicator
10. USB connector
11. A/V IN terminal
12. A/V OUT terminal
13. 🎧 Earphone connector
14. Strap holder
15. LCD panel / monitor


LCD Monitor Information

Video Mode



- | | |
|-----------------------------|--------------------------------------------------------------------------------|
| 1. Video mode icon | DAYLIGHT |
| 2. Zoom status | LAMP |
| 3. Battery power indicator | FLUORESCENT-1 |
| Full battery power | FLUORESCENT-2 |
| Medium battery power | SHADE |
| Low battery power | 8. Video quality |
| Virtually no battery power | SUPER FINE |
| 4. SD memory card indicator | FINE |
| An SD memory card is loaded | NORMAL |
| No SD memory card is loaded | 9. Video resolution |
| SD memory card is full | 640 x 480 pixels |
| 5. Macro mode | 320 x 240 pixels |
| 6. EV compensation | 10. Available recording time (Before recording)/Elapsed time (While recording) |
| 7. White balance | |
| AUTO AUTO | |

 Capture Mode

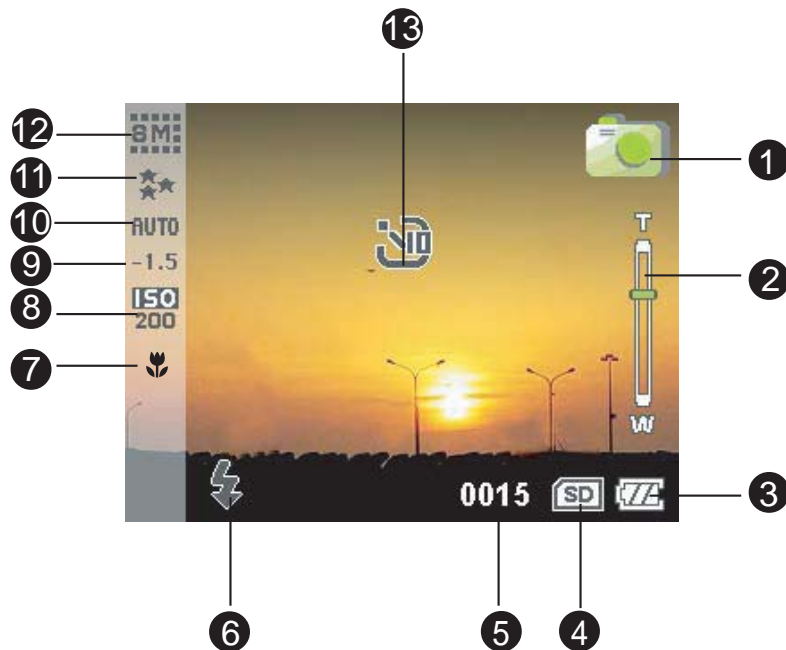

1. Still image mode icon
2. Zoom status
3. Battery power indicator
4. SD memory card indicator
5. Available number of shots
6. Flash mode








- Flash off
- Auto flash
- Auto flash with red-eye reduction

7. Macro mode
8. ISO sensitivity

- AUTO
- ISO 100
- ISO 200
- ISO 400


9. EV compensation
10. AWB (White balance)
11. Image quality
 - ★★ SUPER FINE
 - ★ FINE
 - ★ NORMAL
12. Image resolution
 - 3264 x 2448 (FW interpolation)
 - 2560 x 1920
 - 2048 x 1536
 - 1280 x 960
 - 640 x 480
13. Self-timer indicator (if used)
 - 3-seconds delay
 - 10-seconds delay

 
Video Playback

1. Folder and file name
2. Duration of current video
(Before playback)/
Elapsed time (During playback)
3.  Video playback mode icon
4. Battery power indicator
5. SD memory card indicator
6. Playback indicator
7. Video status bar
8. Sound level (speaker volume)
 -  Low volume
 -  Mild volume
 -  Medium volume
 -  High volume
 -  Fully volume
 -  Mute (no sound)





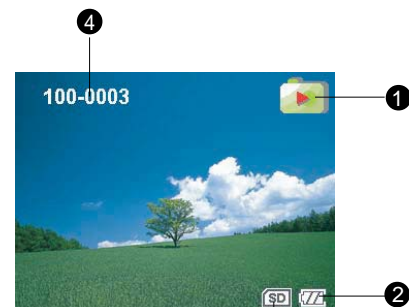


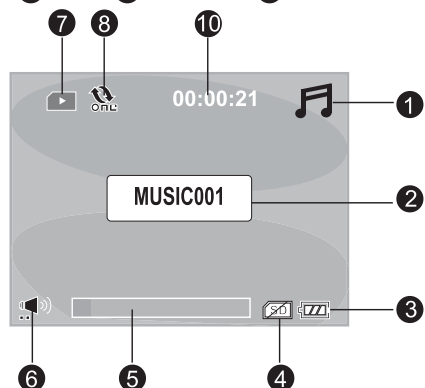
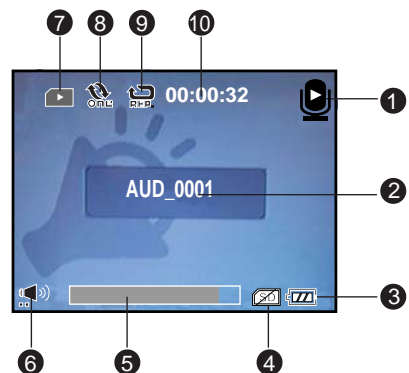
Still Image Playback

1.  Still-image playback mode icon
2. Battery power indicator
3. SD memory card indicator
4. Folder and file name



Audio/MP3 Playback

1.  Audio/MP3 playback mode icon
2. File name
3. Battery power indicator
4. SD memory card indicator
5. Audio/MP3 status bar
6. Sound level (speaker volume)
7. Playback indicator
8. Play mode indicator
 -  Play one file
 -  Play all files
 -  Play the selected files
9.  Repeat indicator
10. Elapsed time




GETTING STARTED

Inserting the Battery


We highly recommend using the specified rechargeable lithium-ion battery to realize the fully capability of your digital video camera.


Charge the battery before using the digital video camera. Make sure that the power of the digital video camera is off before inserting or removing the battery.


1. Slide the battery/SD memory card cover.
2. Insert the battery in the correct orientation, as shown.
3. Close the battery/SD memory card cover firmly.

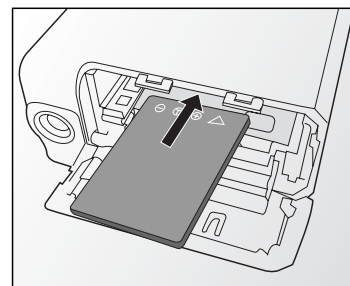

Turning the power On/Off

Press and hold the  button until the digital video camera turns on.

To turn the power off, press and hold the  button again.

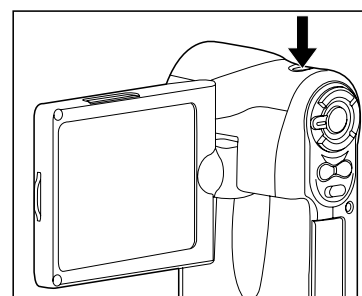


LCD Indicator

Indicator	Status	Description/Activity
LED indicator	Solid green	<ol style="list-style-type: none"> 1. The digital video camera is powering up. 2. The digital video camera is ready to record images (or video clips).
LED indicator	Blinking green	USB communication/transfer is in progress.
LED indicator	Blinking red	Charging the flash.
Self timer indicator	Blinking red	The self-timer function is activated.

Attach the strap

Attach the strap as shown in the illustration.

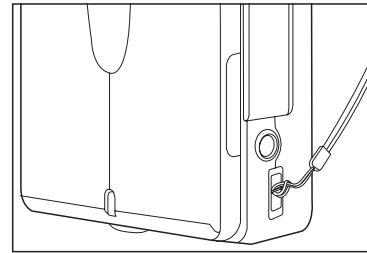


Inserting the SD Memory Card

The digital video camera comes with 32MB of internal memory (24MB available for image storage); allowing you to record video clips, capture still images, MP3 and audio files in the digital video camera.


However, you can also expand the memory capacity by using an SD memory card so that you can store more files.

1. Open the battery/SD memory card cover.
2. Insert the SD memory card.
 - ☐ If the card cannot be inserted, check the orientation.
3. Close the battery/SD memory card firmly.
 - ☐ To remove the SD memory card, make sure the camera is turned off. Open the battery/SD memory card cover, then press lightly on the edge of the memory card and it will eject.

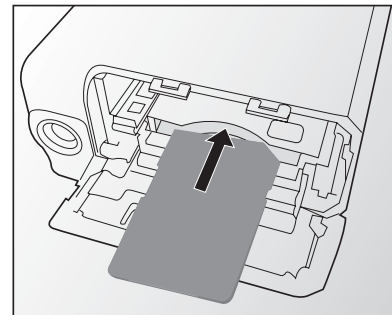




NOTE

- Be sure to format an SD memory card with this digital video camera before using it. Refer to section in the manual titled "Formatting an SD memory card" for further details.
- To prevent valuable data from being accidentally erased from an SD memory card, you can slide the write protect tab (on the side of the SD memory card) to "LOCK".
- To save, edit, or erase data on an SD memory card, you must unlock the card.

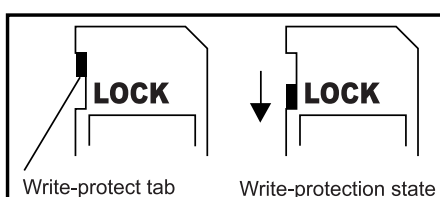

Using the LCD panel

1. Open the panel by pulling it away from the digital video camera.
2. Choose the angle of the monitor that suits you best by rotating the panel.

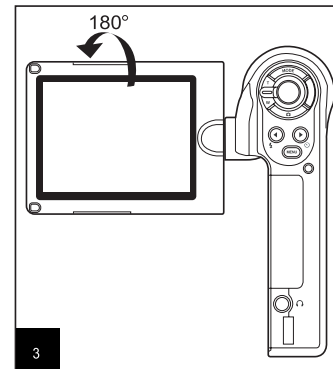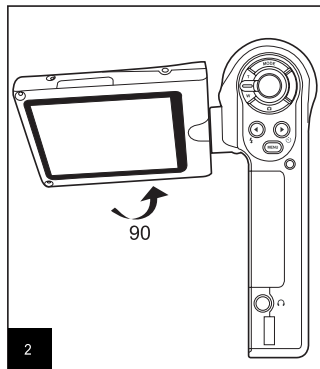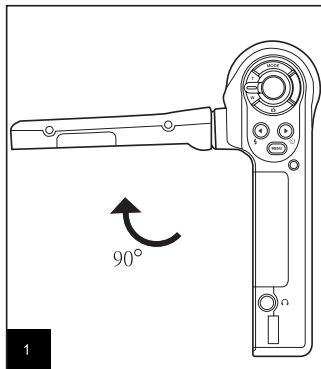


NOTE

- Make sure you open the LCD panel at 90 degrees before attempting to rotate it.
- Rotate the LCD panel carefully and in the correct direction, over rotation and rotation in the wrong direction may damage the hinge that connects the LCD monitor to the digital video camera.
- Avoid contact with the LCD monitor when moving the LCD panel.
- Do not hold the digital video camera by the LCD panel.

Setting the Date and Time

The date/time setting screen will automatically appear:


- ☐ When first turning the digital video camera on;
 - ☐ When turning the power on after leaving the digital video camera without the batteries for an extended period of time.
1. Turn on your digital video camera.
 2. Press the **MENU** button.
 3. Move to [SYSTEM MENU] by using the ◀ button.
 4. Select [DATE SETUP] with the zoom lever, and press the ○ button.
 - ☐ The [DATE SETUP] setting screen is displayed.
 5. Select the item's field with the ◀ / ▶ buttons and adjust the value for the date and time with the zoom lever.
 6. After confirming all settings are correct, press the ○ button.

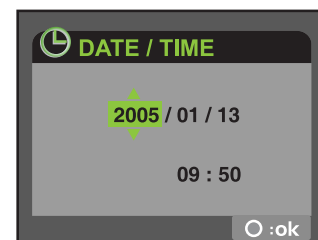

Choosing the Display language

Choose a language for information displayed on the LCD monitor.

1. Turn on your digital video camera.
2. Press the **MENU** button.
3. Move to [SYSTEM MENU] by using the ◀ button.
4. Select [LANGUAGE] with the zoom lever, and press the ○ button.
☐ The [LANGUAGE] setting screen is displayed.
5. Select the desired language using the zoom lever, and press the ○ button to confirm the selection.

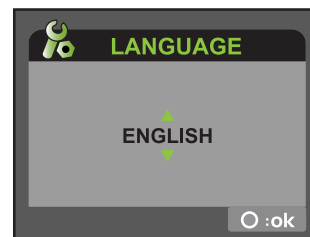

Formatting Internal Memory or an SD Memory Card

Formatting erases all images, videos, sound, MP3 files and folders that are stored on the SD memory card or in internal memory. Formatting is not possible if an SD memory card is locked.

1. Turn on your digital video camera.
2. Press the MENU button.
3. Move to [SYSTEM MENU] by using the ◀ button.
4. Select [FORMAT] with the zoom lever, and press the ○ button.
5. Select [YES] with the zoom lever, and press the ○ button.



NOTE

- You should format an SD memory card before using it for the first time.
- Formatting an SD memory card also erases the protected images. All data other than formatting the card, make sure that all the images are unnecessary.
- Formatting is an irreversible action and data cannot be recovered at a later time.
- An SD memory card having any problem cannot be properly formatted.

 

Setting Image Resolution and Quality

Resolution and quality settings determine the pixel size (dimension), image file size, and compression ratio for your images. These settings affect the number of images that can be stored. As you get to know the camera, it is recommended that you try each quality and resolution setting to get an appreciation for the effects that these settings will have on your images.

Higher resolution and higher quality images offer the best photographic results, but produce large file sizes. Therefore, a few images will take up a lot of memory space. High resolution and quality settings are recommended for printed output and situations requiring the finest detail. Lower resolution/quality images take up less memory space and may be quite suitable for sharing images via e-mail, in a report, or on a web page.

To change image resolution or image quality, perform these steps below:

1. Turn on your digital video camera.
2. Press the **MODE** button continuously until the Capture or Video Mode appears.
3. Press the **MENU** button.
 - ☐ The [CAPTURE MENU] or [MOVIE MENU] screen is displayed.
4. Select [SIZE] with the zoom lever, and press the \bigcirc button to view the resolution choices.
5. Select the desired resolution with the zoom lever, and press the \bigcirc button to confirm.
6. Select [QUALITY] with the zoom lever, and press the \bigcirc button to view the quality choices.
7. Select the desired quality with the zoom lever, and press the \bigcirc button to confirm.

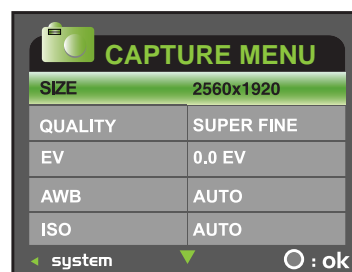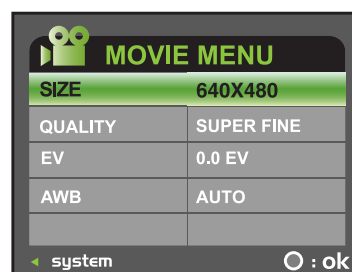

NOTE

- The possible number of shots and recording time depend on the storage size, resolution and quality settings and the subject of the image to be captured.

Possible number of shots (still image)

This table shows approximate shots that you can capture at each setting based on the internal memory or an SD memory card.

Size	Quality	Internal Memory	SD memory Card capacity				
			64MB	128MB	256MB	512MB	1GB
3264 x 2448	SUPER FINE	4	12	24	49	95	190
	FINE	9	24	49	97	189	380
	NORMAL	14	36	73	146	284	570
2560 x 1920	SUPER FINE	7	19	40	79	154	309
	FINE	15	39	79	158	308	616
	NORMAL	23	59	120	239	464	929
2048 x 1536	SUPER FINE	11	30	62	124	241	483
	FINE	23	60	123	247	479	959
	NORMAL	35	91	185	370	718	1438
1280 x 960	SUPER FINE	30	78	159	317	616	1233
	FINE	59	153	312	622	1207	2417
	NORMAL	88	226	458	916	1776	3554
640 x 480	SUPER FINE	115	295	600	1197	2322	4648
	FINE	214	480	975	1946	3774	7553
	NORMAL	249	640	1300	2595	5032	10070

Possible recording time / sec (video clip)


Size	Quality	Internal Memory	SD memory Card capacity				
			64MB	128MB	256MB	512MB	1GB
640 x 480	SUPER FINE	00:43	01:53	03:53	07:47	15:08	30:20
	FINE	00:57	02:31	05:10	10:21	20:07	40:19
	NORMAL	01:11	03:08	06:26	12:54	25:04	50:14
320 x 240	SUPER FINE	01:08	03:01	06:11	12:24	24:05	48:15
	FINE	01:42	04:29	09:12	18:27	35:50	1:11:48
	NORMAL	02:15	05:56	12:10	24:24	47:24	1:34:59


- The data shows the standard testing results. The actual capacity varies according to the shooting conditions and settings.

PHOTOGRAPHY MODE

Capturing Still Images





In this mode, you may capture still images.

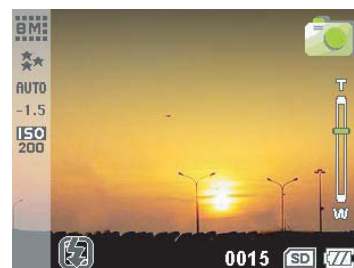1. Turn on your digital video camera.
2. Press the **MODE** button continuously until the Capture Mode appears.
3. Compose your image on the LCD monitor.
4. Press the  button to capture a still image.
 - ☐ The actual captured image appears to be larger than the one on the LCD preview after image captured.



Recording Video Clips

 In this mode, you may record video clips.

1. Turn on your digital video camera.
2. The default mode is Video Mode. If not, press the **MODE** button continuously until the Video Mode appears.
3. Compose the shot.
4. Press the  button.
 - ☐ The recording of the video clip will start.
 - ☐ Pressing the  button again will pause the recording. Pressing the  button during pause will resume recording.
5. Press the  button to stop recording.








NOTE

- When recording video clips, the flash and self-timer cannot be used.

Normal Mode



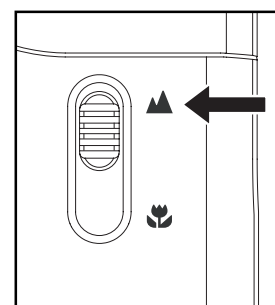

This mode is suitable for scenery and portrait shooting.


1. Turn on your digital video camera.
2. Slide the focus switch to the  side.
3. Compose the shot.
4. Press the  button to capture a still image.
 - ☐ To record video clips, press the  button to start recording, and then press the  button to end the recording.



Marco Mode

Select this when you want to take a close-up photo.

1. Turn on your digital video camera.
2. Slide the focus switch to the  side.
3. Compose the shot.
4. Press the  button to capture a still image.
 - ☐ To record video clips, press the  button to start recording, and then press the  button to end the recording.

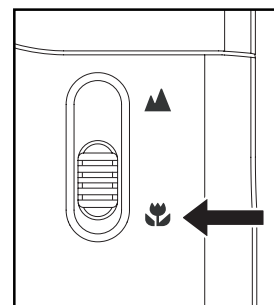




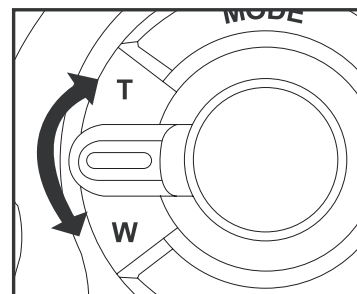
NOTE

- After a macro shot is taken **DO NOT FORGET** to reset the lens to the normal position.
- Flash mode is automatically set to off once you switch to Macro mode.

Using the Digital Zoom

Zoom photography allows you to capture telephoto and wide-angle shots.

1. Turn on your digital video camera.
2. Compose the shot with the zoom lever.
 - ☐ The subject appears closer by sliding the zoom lever to the **T** side.
 - ☐ The subject appears farther away by sliding the zoom lever to the **W** side.
3. Press the  button to capture a “zoomed” image.
 - ☐ To record video clips, press the  button to start recording, and then press the  button to end the recording.
 - ☐ You can also use the zoom lever to zoom in or zoom out the subject while recording the video clips.




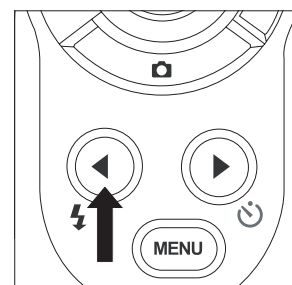
NOTE

- The digital zoom range is from 1x to 8x.




Setting the Flash

Set the flash to suit the photographic conditions.

1. Turn on your digital video camera.
2. Press the  button to select the desired flash mode.



The table below will help you choose the appropriate flash mode:

Flash mode	Description
 Flash Off	The flash will not fire. Select this mode when capturing images in a place where flash photography is prohibited, or when the distance to the subject is beyond the effective range of the flash.
 Auto Flash	The flash fires automatically according to the ambient lighting conditions. Select this mode for general flash photography.
 Auto Flash with Red-eye Reduction	Use this mode to reduce the red-eye phenomenon when you want to capture natural-looking images of people and animals in low-light conditions. When capturing images, the red-eye phenomenon can be reduced by asking the subject (person) to look at the digital video camera or get as close to the digital video camera as possible.








NOTE

- The flash cannot be set in video mode.





Setting the Self-timer

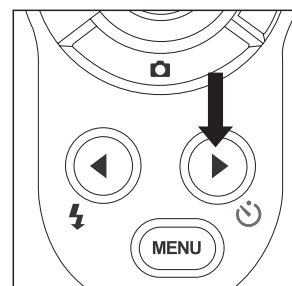This setting allows still images to be captured with the self-timer.

1. Turn on your digital video camera.
2. Press the  button to select the setting.
3. Compose the shot.
4. Press the  button.
 - ☐ The self-timer LED and self-timer icon flash, and then the image is captured after the preset time has elapsed.
 - ☐ To cancel the self-timer during operation, press again the  button.
 - ☐ Once the self-timer has been activated and the  button has been pressed, you can not slide the zoom lever.



The table below will help you choose the appropriate self-timer mode:

Self-timer mode	Description
 3 sec.	The picture is taken about 3 seconds after the  button is pressed.
 10ec.	The picture is taken about 10 seconds after the  button is pressed.






NOTE

- Self-timer cannot be set in video mode.
- The self-timer setting is automatically cancelled after an image is captured.

TV Recording Mode

The TV recording function allows you to record a TV program from a television.

1. Connect one end of the A/V IN cable to the A/V IN terminal of the digital video camera.
2. Connect the other end to the A/V output socket of the TV set.
3. Turn the TV and device on.
4. Toggle the **MODE** button to select the TV mode.
5. Press the  button to start recording. To stop recording, press the  button.

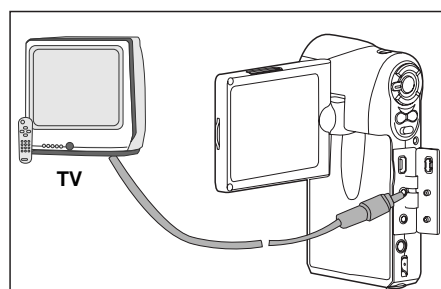








NOTE


- The AV cable must be connected to the device and TV set, otherwise, the TV recording function will not be available to use.
- Switching the TV channel during the TV program recording process may cause the device to stop or hang up.

PLAYBACK MODE

Playing Back Still Images / Video Clips

You can playback the still images on an LCD monitor.

1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [IMAGE/MOVIE] with the zoom lever and press the  button.
The last image/video clip appears on the LCD monitor.
4. Select the desired images with the zoom lever.
 - ☐ To view the previous image, slide the zoom lever to the **T** side.
 - ☐ To view the next image, slide the zoom lever to the **W** side.
 - ☐ To start playing back the video clips, follow the steps 1-4 above, then press the  button.
 - ☐ A press of the  /  buttons during playback allows fast forward play / fast reverse play. To pause video playback, press the  button; to cancel pause, press the  button again.
 - ☐ To stop video playback, press the  button. This stops playback and returns to the start of the video clip.

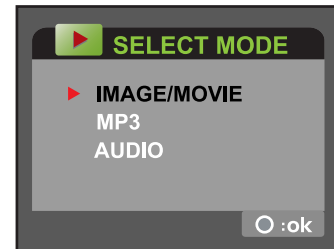


NOTE

- If the video cannot playback in WMP 9.0, please update WMP 9.0 from the Microsoft website.
- To adjust the sound level, sliding the zoom lever to the **T** side will increase the volume, sliding the zoom lever to the **W** side will decrease the volume.

Playing Back Still Images/Video Clips on TV

You can also playback your images on a TV screen. Before connecting to any devices, make sure to select NTSC / PAL system to match the video output system of the video equipment you are going to connect to the digital video camera, then turn all connected devices off.


1. Connect one end of the A/V OUT cable to the A/V OUT terminal of the digital video camera.

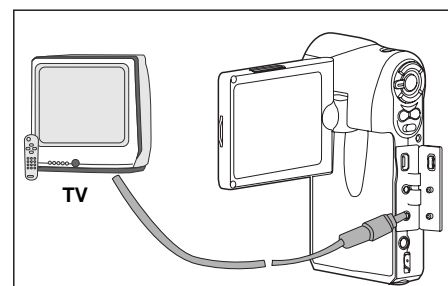


2. Connect the other end to the A/V input socket of the TV set.
3. Turn the TV and digital video camera on.
4. Playback the still images / video clips.
 - ☐ The method of operation is the same as playing back still images and video clips on the digital video camera.

Zoom Playback


Images that are being played back can be enlarged. The zoom factor displayed on the screen shows the current magnification ratio.

1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [IMAGE/MOVIE] with the zoom lever and press the button.
4. Select the desired image with the zoom lever.
5. The displayed image can be enlarged by each press of the  button. The magnification factors range from 1x to 8x (within 16 stages: 1.0x, 1.5x, 2.0x, 2.5x, 3.0x, 3.5x, 4.0x, 4.5x, 5.0x, 5.5x, 6.0x, 6.5x, 7.0x, 7.5x, 8.0x and thumbnail display).
 - ☐ During zoom playback, the outer frame indicates the entire image; while the inner frame indicates the location of the currently enlarged area.
6. Slide the zoom lever upward or downward or press the ◀ / ▶ buttons to select the area to enlarge.

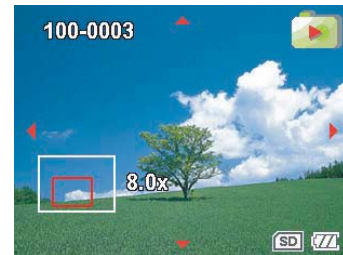

Thumbnail Display

 
 








This function allows you to view 9 thumbnail images on the LCD monitor at the same time, so you can quickly search for the image that you want.



1. Follow "Zoom Playback" section steps 1-5 until the thumbnail display is on the screen.
2. Press the ◀ / ▶ buttons or the zoom lever to select the image/video clip to be displayed at regular size.
3. Press the  button.



Protecting Images


Set the data to read-only to prevent images from being erased by mistake.

 
1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [IMAGE/MOVIE] with the zoom lever and press the  button.
4. Select the still image/video clip that you want to protect with the zoom lever.
 - ☐ You may select the still image/ video clip that you want to protect from the thumbnail display.
5. Press the **MENU** button.
 - ☐ The [PLAYBACK MENU] is displayed.
6. Select [PROTECT] with the zoom lever, and press the  button.
7. Select [ONE FILE] or [ALL FILE] with the zoom lever, and press the button.
8. Select [LOCK] by pressing the  /  buttons, and press the  button.
 - ☐ Protect is executed and the digital video camera returns to the play mode.
 - ☐ The protect icon  is displayed with protected images. When [ALL FILE] is selected,  is displayed with all the images.
 - ☐ To cancel protection, follow the step 5-8 to select [UNLOCK] by pressing the  /  buttons, and press the  button.
 - ☐ The removal of image protection is executed and the digital video camera returns to the play mode.

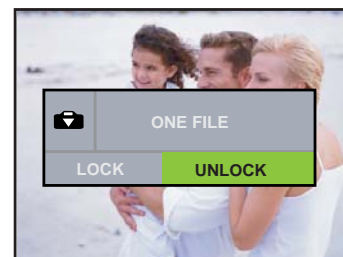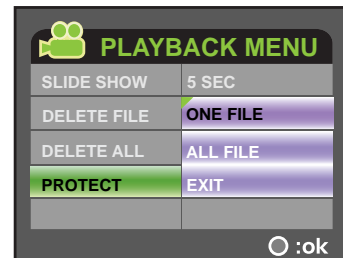




Slide Show Display

  The slideshow function enables you to playback still images/video clips automatically in order one image at a time.

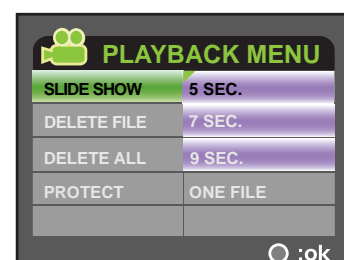 1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [IMAGE/MOVIE] with the zoom lever and press the  button.
4. Press the **MENU** button.







5. Select [SLIDE SHOW] with the zoom lever, and press the  button.
6. Set the playback interval with the zoom lever, and press the  button.
 - ☐ The slide show starts.
 - ☐ The video clips are displayed the first frame image, and not played back.
 - ☐ To stop slide show, press the  button.





NOTE

 - You can adjust slide show display interval within the range of 5 SEC, 7 SEC, and 9 SEC.


Delete Still Image / Video Clips

 
1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [IMAGE/MOVIE] with the zoom lever and press the  button.
4. Select the still image/video clip that you want to erase with the zoom lever.
 - ☐ You may select the still image/ video clip that you want to erase from the thumbnail display.
5. Press the **MENU** button.
6. Select [DELETE FILE] or [DELETE ALL] with the zoom lever, and press the  button.
 - ☐ [DELETE FILE]: Delete the current still image/video clip.
 - ☐ [DELETE ALL]: Delete all still images/video clips.
7. Select [YES] with the zoom lever, and press the  button.
 - ☐ To not delete, select [NO], and press the  button.
 - ☐ If all video clips/images are deleted, [NO FILE!] pops up.
 - ☐ If you want to turn back to the photography mode, press the **MODE** button.

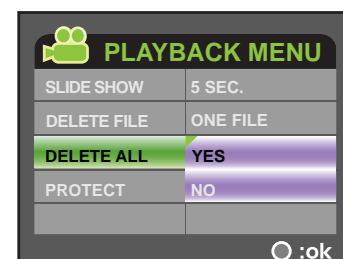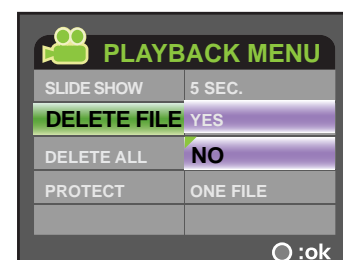






MP3 Mode

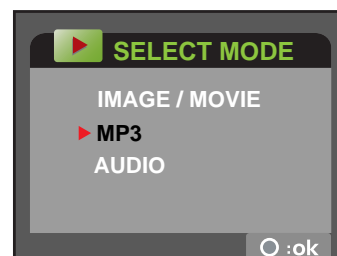The digital video camera lets you playback MP3 files. You may download MP3 files to your computer and then copy them into the digital video camera via the USB cable or insert an SD memory card with MP3 files recorded into the digital video camera.

1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [MP3] with the zoom lever and press the  button.
 - ☐ The MP3 LIST appears on the screen.






Button operations



Button \ State	MP3	
	Playlist	During playback
	Power off (press & hold)	Power off (press & hold)
T	Scroll up	Volume +
W	Scroll down	Volume -
	Previous page	-
	Next page/Add selection	-
MODE	Back to LCD preview	-
MENU	Enter MP3 menu	-
	-	Stop playing MP3 music
	Start to play MP3 music	Pause playing MP3 music

AUDIO RECORDING MODE

 
The digital video camera enables you to record and playback audio files anytime and anywhere.


Recording Audio Files

1. Turn on your digital video camera.
2. Toggle the **MODE** button to select audio recording mode as the illustration.
3. Press the  button.
 - ☐ Voice starts recording.
 - ☐ To pause recording, press the  button again.
 - ☐ To stop recording, press the  button.
 - ☐ The maximum recordable time for voice recording is over 1 hour.

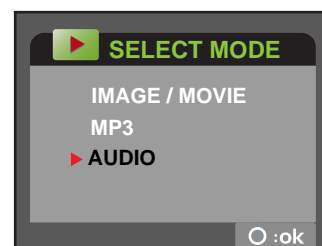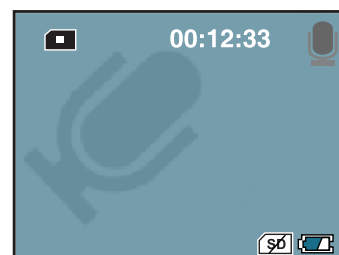



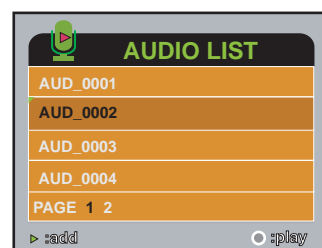


Playing Back Audio Files





1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [AUDIO] with the zoom lever and press the  button.
 - ☐ The AUDIO LIST appears on the screen.





Button operations

Button \ State	Audio	
	Playlist	During playback
	Power off (press & hold)	Power off (press & hold)
T	Scroll up	Volume +
W	Scroll down	Volume -
	Previous page	-
	Next page/Add selection	-
MODE	Back to LCD preview	-
MENU	Enter AUDIO menu	-
	-	Stop playing Audio file
	Start to play voice file	Pause playing Audio file

 Deleting MP3 / Audio Files

1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [MP3] / [AUDIO] with the zoom lever and press the  button.
 - ☐ The MP3 / AUDIO LIST appears on the screen.
4. Press the **MENU** button.
 - ☐ The [MP3 MENU] or [AUDIO MENU] appears on the screen.
5. Select [DELETE] with the zoom lever and press the  button.
 - ☐ [SELECT]: Delete the selected audio or MP3 file.
 - ☐ [ALL]: Delete all audio or MP3 files in a single operation.
6. Select [YES] with the zoom lever, and press the  button.
 - ☐ To not delete, select [NO], and press the  button.
 - ☐ If all files are deleted, [NO FILE!] pops up.
 - ☐ If you want to turn back to the photography mode, press the **MODE** button.

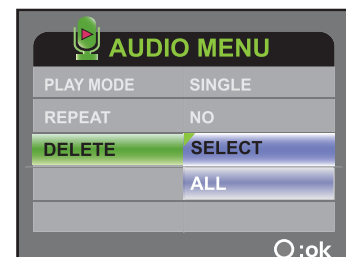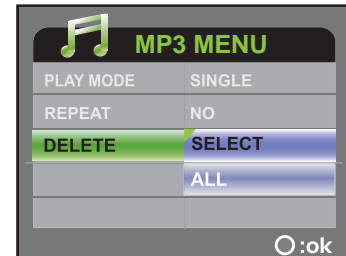


MENU OPTIONS

Video Menu

This menu is for the basic settings to be used when capturing video clips in the photography mode.

1. Turn on your digital video camera.
2. Press the **MENU** button. The [MOVIE MENU] is displayed on the screen.
3. Select the desired option item with the zoom lever, and press the \bigcirc button.
4. Select the desired setting with the zoom lever, and press the \bigcirc button.
5. To exit from the menu, press the **MENU** button.

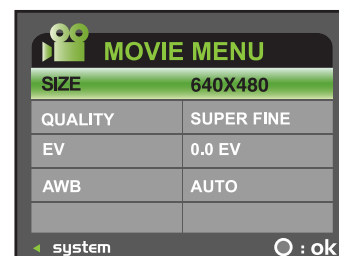

Size

Sets the desired video resolution.

- ☐ 640 x 480
- ☐ 320 x 240

Quality

Sets the quality (compression rate) at which the video is to be recorded.

- ☐ $\star\star$ Super Fine
- ☐ \star Fine
- ☐ \star Normal

EV

Your digital video camera adjusts the exposure of each scene automatically. However, if the subject is very dark, or very bright, you may override the digital video camera's automatic exposure determination to make the subject brighter or darker. This is called EV compensation. The EV compensation can be adjusted from -1.8EV to +1.8EV.

AWB

This sets the white balance photography under a variety of lighting conditions and permits photographs to be taken that approach the conditions that are seen by the human eye.

 

- ☐ [AUTO] AUTO: Automatic adjustment
- ☐ [] DAYLIGHT: For recording outdoors on a bright day
- ☐ [] LAMP: For recording under lamp light
- ☐ [] FLUORESCENT-1: Cool white fluorescent (W3900-4500K)

- ☐ [⚡] FLUORESCENT-2: Day white fluorescent (W4600-5400K)
- ☐ [☁] SHADE: For recording outdoors on a cloudy day

Capture Menu

This menu is for the basic settings to be used when capturing still images in the photography mode.

1. Turn on your digital video camera.
2. Toggle the **MODE** button to access camera mode, then press the **MENU** button.
3. The [CAPTURE MENU] is displayed on the screen.
4. Select the desired option item with the zoom lever, and press the \bigcirc button.
5. Select the desired setting with the zoom lever, and press the \bigcirc button.
6. To exit from the menu, press the **MENU** button.

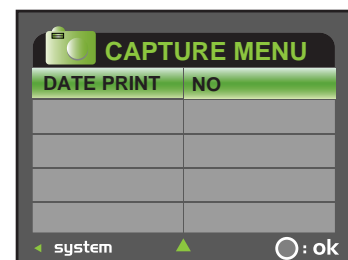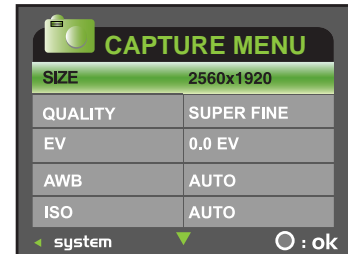

SIZE

Sets the desired image resolution.

- ☐ 3264 x 2448 (FW interpolation)
- ☐ 2560 x 1920
- ☐ 2048 x 1536
- ☐ 1280 x 96
- ☐ 640 x 480

QUALITY

Sets the quality (compression rate) at which the still image will be compressed and stored as JPG files.

- ☐ ** Super Fine
- ☐ * Fine
- ☐ ★ Normal

EV

Refer to “EV” in Movie Menu for further details.

AWB

Refer to “AWB” in Movie Menu for further details.

ISO

Sets the sensitivity for photography. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixelated (grainier) the image will appear.

- ☐ [AUTO]: Auto adjustment
- ☐ [100]: Equivalent to ISO 100
- ☐ [200]: Equivalent to ISO 200
- ☐ [400]: Equivalent to ISO 400



DATE PRINT

 
The capture date can be printed directly on your still images. This function must be activated before the image is captured.

- ☐ [YES]: Imprints the date on the still images when capturing images.
- ☐ [NO]: Does not imprint the date on the still images when capturing images.

TV Menu

This menu is for the basic settings to be used when capturing TV clips in the TV recording mode.

1. Turn on your digital video camera.
2. Press the MENU button. The [TV MENU] is displayed on the screen.
3. Select the desired option item with the zoom lever, and press the  button.
4. Select the desired setting with the zoom lever, and press the  button.
5. To exit from the menu, press the MENU button.

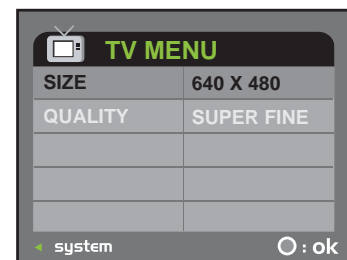

SIZE

Sets the desired TV clip resolution.

- ☐  640 x 480
- ☐  320 x 240




QUALITY

 
Sets the quality (compression rate) at which the TV clip is to be recorded.

- ☐ ** Super Fine
- ☐ * Fine
- ☐ ★ Normal

Playback Menu

This menu sets which settings are to be used for playback.

1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [IMAGE/MOVIE] with the zoom lever and press the  button.
4. Press the **MENU** button.
 - ☐ The PLAYBACK MENU is displayed on the screen.
5. Select the desired option item with the zoom lever, and press the  button.
6. Select the desired setting with the zoom lever, and press the  button.
7. To exit from the menu, press the **MENU** button.

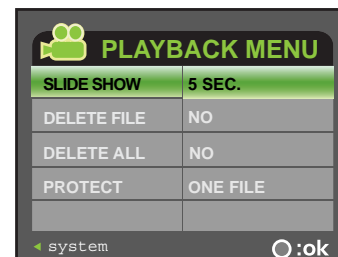

Slide Show

Refer to “Slideshow Display” for further details.

DELETE FILE

Refer to “Deleting Still Images/Video Clips” for further details.

DELETE ALL



Refer to “Deleting Still Images/Video Clips” for further details.


PROTECT


Refer to “Protecting Still Images/Video Clips” for further details.

MP3 / Audio Menu

This sets whether or not to play MP3 files repeatedly or delete MP3 files.

1. Turn on your digital video camera.
2. Toggle the **MODE** button to go to [SELECT MODE].
3. Select [MP3] or [AUDIO] with the zoom lever, and press the  button.
4. Press the **MENU** button.
 - ☐ The [MP3 MENU] or [AUDIO MENU] is displayed on the screen.
5. Select the desired option item with the zoom lever, and press the  button.

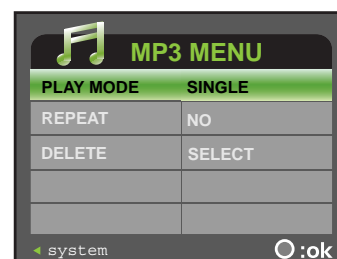


6. Select the desired setting with the zoom lever, and press the  button.
7. To exit from the menu, press the **MENU** button.

PLAY MODE

Sets the method of the file playback mode.

- ☐ [SINGLE]: Play only one audio or MP3 file.
- ☐ [SELECT]: Play the selected audio or MP3 files.
- ☐ [ALL]: Play all audio or MP3 files.

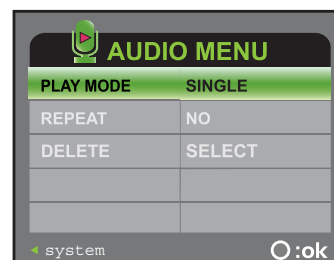

REPEAT

Sets to playback the files repeatedly.



 
- ☐ [NO]: Play the listed files only once.
- ☐ [YES]: Repeatedly play your audio or MP3 files according to your preference.


DELETE

Refer to “Deleting MP3 / Audio Files” for further details.

System Menu

Sets your digital video camera's operating environment.

 1. Turn on your digital video camera.
2. Toggle the **MODE** button to access in video, camera or playback
3. (SELECT MODE) mode, then press the **MENU** button.
4. Press  to access in **SYSTEM MENU**.
5. Select the desired option item with the zoom lever, and press the  button.
6. Select the desired setting with the zoom lever, and press the  button.
7. To exit from the menu, press the **MENU** button.

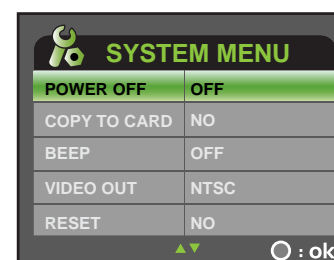


LANGUAGE

Refer to “Choosing the Display Language” for further details.

FORMAT

 Refer to “Formatting Internal Memory or an SD Memory Card” for further details.

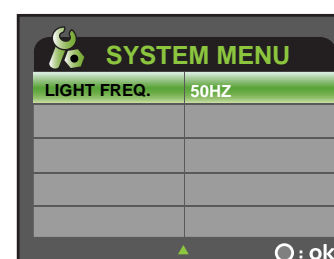

LCD BRIGHT

Adjusts the brightness of the LCD monitor. The LCD becomes brighter by sliding the zoom lever to the T side and darker to the W side. The adjustment range is from -5 to +5.

DATE TYPE

Sets the displayed type of date and time on the screen.

- ☐ [Y/M/D]: Year/Month/Day
- ☐ [D/M/Y]: Day/Month/Year
- ☐ [M/D/Y]: Month/Day/Year

DATE SETUP

Refer to "Setting the Date and Time" for further details.

POWER OFF

If no operation is performed for a specific period of time, the power to the digital video camera is automatically turned off. This feature is useful to reduce battery wear.

- ☐ [OFF] / [1 MIN.] / [3 MIN.] / [5 MIN.] / [10 MIN.]

COPY TO CARD

Allows you to copy your files from the digital video camera's internal memory to a memory card. Of course, you can only do this if you have a memory card installed and some files in internal memory.

- ☐ [YES] / [NO]

VIDEO OUT

Sets video output system of the video equipment that you are going to connect to the digital video camera.

- ☐ [NTSC]: NTSC system
- ☐ [PAL]: PAL system

RESET

Returns all basic settings to the digital video camera's default settings.

- ☐ [YES]: Returns to the default settings.
- ☐ [NO]: Does not return to the default settings.

LIGHT FREQ.

When photographing under artificial lighting, select the correct frequency setting depending on your country's electrical standard.

- ☐ [60HZ] / [50HZ]











BEEP





Enables or disables the sounds (beeps) associated with digital video camera button functions.

- ☐ [ON]: Enables sounds/beep tones.
- ☐ [OFF]: Disables sounds/beep tones.



CONNECTING TO A PICTBRIDGE COMPLIANT PRINTER

If a printer that supports PictBridge is available, images can be printed by connecting the digital video camera directly to the PictBridge-compatible printer without using a computer.

1. Connect the digital video camera to the printer using the USB cable.
2. Turn on the printer and digital video camera.
 - ☐ The [USB MODE] screen appears on the screen.
3. Select [PICTBRIDGE] with the zoom lever, and then press the  button.
4. Select [SIZE] or [BORDERLESS] with the zoom lever and select its print type with the  /  buttons. Then press the  button to confirm the selection.
 - ☐ [SIZE]: You may select the desired item according to the type of printer being used.
 - ☐ [BORDERLESS]: You may select the desired item according to the type of printer being used.
5. Select the image that you want to print with the  /  buttons, and then use the zoom lever to set more detailed print settings.
6. Select [PRINT NUMBER], [DATE] or [FILE NAME] with the zoom lever and change their settings with the  /  buttons. Then press the  button to confirm the selection.
 - ☐ [PRINT NUMBER]: Select the number of each image to be printed up to 10.
 - ☐ [DATE]: Select [WITH] to print the image with date imprint.
 - ☐ [FILE NAME]: Select [WITH] to print the image with file name.
7. Use the zoom lever to select [PRINT]. Then press the  button to confirm the print settings and start printing.

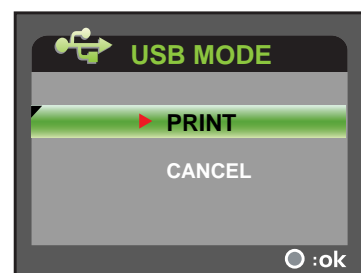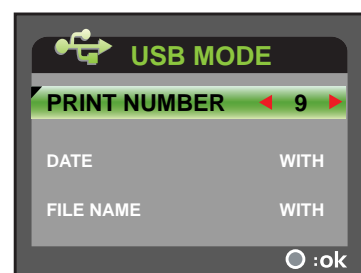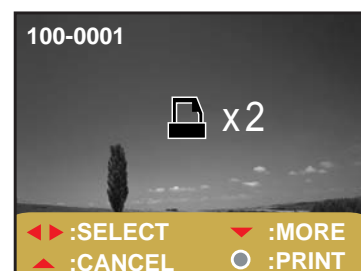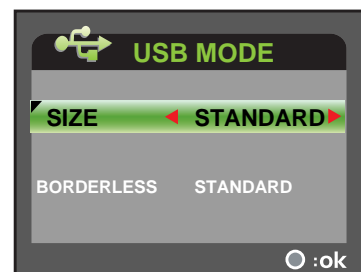

8. The printing starts and the figure shown on the right hand side appear until the printing is complete.
9. To cancel printing, press the ○ button while the printing is proceeding.
 - A selection screen appears. Use the zoom lever to select [CANCEL]. Then press the ○ button to cancel printing.

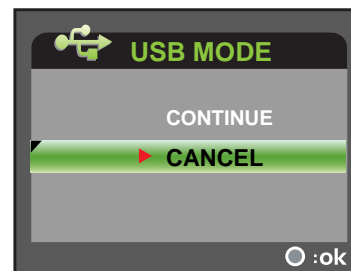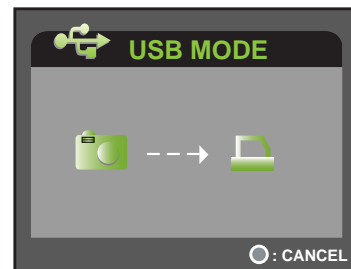

TRANSFERRING RECORDED IMAGES AND VIDEOS TO YOUR COMPUTER

To transfer the recorded files from the digital video camera to your computer, follow these steps:

Step 1: Install the USB driver (Windows 98 only)

Step 2: Connect the digital video camera to your computer

Step 3: Download image, audio and video files

System requirements (Windows)

- ☐ Pentium III 600 MHz or higher
- ☐ Windows 98/98SE/Me/2000/XP
- ☐ 64MB RAM
- ☐ 128MB hard disk space
- ☐ CD-ROM drive
- ☐ Available USB port


Step 1: Install the USB driver (Windows 98 only)


Windows 98 computers

The USB driver on the CD-ROM is exclusively for Windows 98 computers. Installing the USB driver on computers running Windows 2000/ME/XP is not necessary.


1. Insert the CD-ROM that came with the digital video camera into your CD-ROM drive. The welcome screen appears.
2. Click "Install USB/Web-Cam driver". Follow the on-screen instructions to complete the installation. After the USB driver has been installed, restart your computer.

Step 2: Connecting the Digital Video Camera to Your Computer

1. Connect one end of the USB cable to the USB connector on the digital video camera.
2. Connect the other end of the USB cable to an available USB port on your computer.
3. Turn on your digital video camera.
 - ☐ The [USB MODE] screen appears on the screen.
4. Select [MASS STORAGE] with the zoom lever, and press the  button.
5. From the Windows desktop, double click on "My Computer".

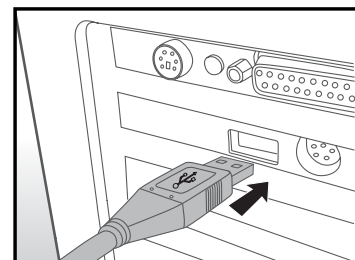

6. Look for a new "Removable disk" icon. This "Removable disk" is actually the memory or memory card in your digital video camera.
7. Double click on the removable disk and locate the DCIM, MP3 and AUDIO folders.
8. Double click on the folders to open it to find more folders.
 - ☐ Your recorded images, video clips and audio files will be inside these folders.
 - ☐ Copy, Paste or Drag-N-Drop images, videos, and audio to a folder on your computer.

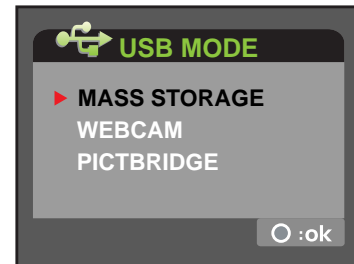

NOTE

- Whenever the USB power supply is used while transferring images to your computer, the other buttons on your digital video camera will not perform the functions.

Step 3: Downloading still images, video clips and audio files

When the digital video camera is turned on and connected to your computer, it is considered to be a disk drive, just like a floppy disk or CD. You can download (transfer) images by copying them from the "Removable disk" to your computer hard drive.

Windows

Open the "removable disk" and subsequent folders by double clicking on them. Your images, videos, and audio are inside these folder(s). Select the files that you want, and then choose "Copy" from the "Edit" menu. Open the destination location (folder) and choose "Paste" from the "Edit" menu. You may also drag and drop image files from the digital video camera to a desired location.



NOTE

- The recorded audio files are stored on the "AUDIO" folder.
- For transferring MP3 files, simply copy the MP3 files from your computer hard drive to the "MP3" folder.
- Memory card users may prefer to use a memory card reader (highly recommended).
- Video playback application is not included with the package. Make sure that video playback application has been installed in your computer.

USING THE DIGITAL VIDEO CAMERA AS A WEB CAMERA

Your digital video camera can act as a Web camera, which allows you to videoconference with business associates, or have a real-time conversation with friends or family.

To use the digital video camera as a Web camera, follow these steps:

Step 1: Install the Web camera driver (same as USB driver)

Step 2: Connect the digital video camera to your computer

Step 3: Run your application software (i.e. Windows NetMeeting)



NOTE

- Video conferencing (or video editing) software is not included with the digital video camera.
- This mode is not supported for Mac.

General system requirements for videoconference

To use the digital video camera for videoconference, your computer system must include:

- ☐ Microphone
- ☐ Sound card
- ☐ Speakers or headphones
- ☐ Network or Internet connection

Step 1: Install the Web Camera Driver

The Web-camera driver included on the CD-ROM is exclusively for Windows. The Web camera function is not supported for Mac platforms.

 
1. Insert the CD-ROM that came with the camera into your CD-ROM drive. The welcome screen appears.
2. Click "Install USB/Web cam driver". Follow the on-screen instructions to complete the installation. After the driver installation is completed, restart your computer.




NOTE

- The USB driver that bundled inside the CD-ROM is designed in a form 2 in 1 (USB & Web camera driver).
 - a) On Windows 98, the Windows OS will install both USB & Web camera drivers.
 - b) On Windows 2000/ME/XP, it will only install Web camera driver.

Step 2: Connect the Digital Video Camera to Your Computer

1. Connect one end of the USB cable to the USB connector on the digital video camera.
2. Connect the other end of the USB cable to an available USB port on your computer.
3. Turn on your digital video camera.
 - ☐ The [USB MODE] screen appears on the screen.
4. Select [WEBCAM] with the zoom lever, and press the  button.
5. Position the digital video camera steadily on top of your computer monitor or use a tripod.

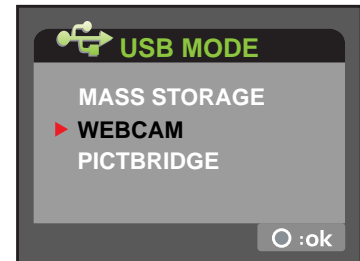

Step 3: Run Your Application Software

To use Windows NetMeeting for videoconference:

1. Go to **Start => Programs => Accessories => Communications => Net Meeting** to launch the NetMeeting program.
2. Click the Start Video button to view live video.
3. Click the Place Call button.
4. Type the e-mail address or the network address of the computer that you are calling.
5. Click Call. The person that you are calling must also have Windows NetMeeting running and be willing to accept your call to start the videoconference.



NOTE

- The video resolution for videoconferencing applications is generally 320 x 240.
- For more information about the operation of videoconference application software, refer to its respective help documentation.
- When the Web camera function is activated (i.e. images are being transferred), the LED (green color) blinks. If the USB cable is unplugged at the time of transferring images, the screen would become blank the next time when you run the Web camera function. In this situation, you should restart the computer. The proper operating method should be: Close the Web camera application, then remove the USB cable.

INSTALLING VIDEOSTUDIO

Ulead® VideoStudio is home video-editing software that makes editing video clips as fun as shooting them. Users can make a video in three easy steps using the new Movie Wizard mode. VideoStudio features fully customizable filters and special effects and shares finished projects on diversified devices by supporting the latest formats.

To install VideoStudio:

1. Insert the CD-ROM that came with the camera into your CD-ROM drive.
2. The welcome screen appears.
3. Click “Install Ulead® VideoStudio”. Follow the on-screen instructions to complete the installation.



NOTE

- For more information about the operation of VideoStudio application software, refer to its respective help documentation.
- For Windows 2000/XP users, please make sure to install and use the VideoStudio in “Administrator” mode.
- VideoStudio is not supported on the Mac.

SPECIFICATIONS

Item	Description
Image sensor	CMOS sensor (5.0 mega pixels)
Image resolution	<Still image> 3264 x 2448 (FW interpolation), 2560 x 1920, 2048 x 1536, 1280 x 960, 640 x 480 <Video clip> 640 x 480 (30 fps), 320 x 240 (30 fps)
LCD monitor	2.5" full color LTPS-TFT LCD (230K pixels)
Recording media	32 MB internal memory (approx. 24 MB for image storage) Supports SD memory card (up to 1 GB)
Compression format	MPEG 4 SP (Video), IMA-ADPCM (Audio)
File format	EXIF 2.1, DCF 1.0, JPEG, ASF (Video)
Lens	Aperture range: 3.3 Focal Length: 6.95mm
Focus range	Normal: 1m - infinity Macro: 0.6m - 1m
Shutter speed	1/2000 ~ 1/2 sec.
Digital zoom	8X
Self-timer	3-sec delay, 10-sec delay
Terminal	DC in & USB (with cradle terminal)
Interface	USB connector, A/V IN terminal, A/V OUT terminal, earphone jack
Power supply	Rechargeable Lithium-ion battery (NP60)
Dimension	Approx. 118 x 58 x 28mm (without protruding parts)
Weight	Approx. 140g (without battery and the SD memory card)

- Design and specifications are subject to change without notice.



TROUBLESHOOTING

Refer to the symptoms and solutions listed below before sending the digital video camera for repair. If the problem persists, contact your local reseller or service center or send us an email at sim@geniusnet.com.tw

Power Supply

Symptom	Cause	Solution
The power does not come on.	The battery is not loaded.	Load the battery correctly.
	The battery is exhausted.	Recharge the battery.
	The AC power adapter is not connected correctly.	Reconnect it properly.
The power cuts out during use.	The digital video camera was left unattended and unused, so the auto power off cuts it off.	Turn the power back on.
	The battery is exhausted.	Recharge the battery.
The power does not go off.	Digital video camera malfunction.	Reload the battery.
The battery runs out quickly.	It is being used in extreme low temperature.	
	Many shots are being captured in dark places inside, requiring flash.	
	The battery is not fully charged. The battery is not used for an extended period of time after charged.	Fully charge the battery and discharge it for at least one complete cycle before using it to maximize its performance and lifetime.
The battery or digital video camera feels warm.	Long period of continuous use of the digital video camera or the flash.	

Shooting

Symptom	Cause	Solution
Even if I press the shutter button, the digital video camera does not shoot.	The battery is running low.	Reload the battery.
	The power is not on.	Turn the power on.
	The digital video camera is not in shooting mode.	Slide the mode switch to shooting mode.
	The shutter button is not pressed all the way.	Press the shutter button all the way.
	The memory card does not have any free space.	Load a new card, or delete unwanted files.
	End of memory card life.	Load a new memory card.
	The flash is recharging.	Wait until the system LED off.
	The memory card is unrecognized by the digital video camera.	Format the memory card in this digital video camera before its first use or when it was used other than this digital video camera.
Images do not appear on the LCD monitor.	The auto power off function is activated.	Turn the power on again.
	The power is not on.	Turn the power on.
The flash does not fire. The flash cannot recharge.	The LCD monitor is dark.	Adjust the brightness of the LCD monitor in the SYSTEM MENU.
	The digital video camera is set to  mode.	Set the focus switch to  position.
Even though the flash fired, the image is dark.	The flash is set to flash off.	Set the flash to something other than flash off mode.
	The distance to the subject is greater than flash effective range.	Get closer to your subject and capture.
The image is too dark.	The image was captured in a dark place while set to flash off.	Set the flash to something other than flash off mode.
	It is under-exposed.	Set the exposure compensation to a larger value.

Symptom	Cause	Solution
The image is too bright.	It is over-exposed.	Set the exposure compensation to a smaller value.
The image lacks natural color.	The image was captured in conditions that are hard for Auto White Balance to adjust to.	Add a white object to the composition.

Playback

Symptom	Cause	Solution
Cannot playback.	It is not set to playback mode.	Slide the mode switch to playback mode.
The contents of memory card cannot be replayed.	You played back a memory card that was not formatted by this device.	Load a card that was formatted and stored on by this device.
Files cannot be deleted.	The file is protected.	Cancel protection.
	You played back a memory card that was not formatted by this device.	Load a card that was formatted and stored on by this device.
Cannot format a memory card.	The memory card is write-protected.	Remove the write-protection.
	End of memory card life.	Load a new memory card.
The playback image is dark though I used the flash.	The LCD monitor is too dark.	Adjust the brightness of LCD monitor in the SYSTEM MENU.

Other Problems

Symptom	Cause	Solution
Cannot load the memory card.	The card is facing the wrong way.	Load correctly.
Even when the digital video camera's buttons are pressed, it does not operate.	The battery is running low.	Recharge the adapter.
	Digital video camera malfunction.	Turn the power off and remove the battery once, and try again.
The date and time is wrong.	The correct date and time is not set.	Set the correct date and time.
The date set has disappeared.	The battery is removed with the power still on.	Set the date and time again.

About connecting to your computer/software

Symptom	Cause	Measure
Cannot download images.	The free space on the hard disk drive of your computer may be insufficient.	Check whether the hard disk drive has enough space for running Windows, and if the drive for loading files has a capacity at least that of the memory card inserted in the digital video camera.
	No power supply.	Recharge the battery or turn the power on.
	The USB driver is not installed (for Windows 98/98SE).	Install USB driver.